


Please read this information below before use.
使用本產品前，請先閱讀以下說明。

Unfolding Method 打開方法

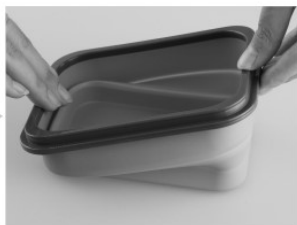

1. Open the lid.
打開盒蓋



2. Extend one side
of the container.
首先伸展開食物盒
的一邊



3. Extend the other
side of the container.
再伸展食物盒
的另一邊



4. Close the lid.
放上盒蓋

Folding Method 摺疊方法



1. Open the lid.
打開盒蓋



2. Fold in one side of
the container, following
the folding line.

*Avoid pressing with finger nail
按照食物盒上的摺紋先摺入一邊
*避免以指甲用力按下



3. Follow the folding
line around the
containerto fold
in the whole rim.
再圍繞摺紋摺入
一整圈



4. Close the lid.
放上盒蓋

- ① Before use, wash with detergent and rinse with clear water.
使用本產品前，請先用清潔液及清水清洗乾淨。
- ② The silicon and plastic materials for this food container are LFGB approved and BPA free.
本產品使用的矽膠及塑膠物料均已符合德國LFGB食品級物料認證及不含BPA物質。
- ③ The lid is not suitable for use in microwave ovens.
本產品的蓋子不可使用於微波爐。
- ④ Do not use liquid detergent which contains any bleach or chlorine.
請勿使用含漂白劑或含氯洗滌劑於本產品。